

# OWNER'S MANUAL

## Truxedo® Edge



P.O. Box 1078, 2209 Kellen Gross Dr., Yankton SD 57078  
Phone: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304  
[www.truxedo.com](http://www.truxedo.com)

P/N 1117427 Rev. C

## FIVE YEAR WARRANTY

TruXedo warrants that all new, unused products are free from defects in material and workmanship. This Five Year Limited Warranty is effective if the product is properly installed and used for the purpose intended. It applies to the original buyer only. TruXedo's obligation under this Warranty is limited to repairing, or at its option, replacing any part that is returned, transportation prepaid, to TruXedo, Inc. Yankton, South Dakota, if the product is, in our judgment, defective. All materials must be accompanied by an RMA (Returned Material Authorization) number requested by and authorized in advance of returning the materials. TruXedo shall not be liable or responsible to supply or pay labor to replace any part found defective, nor shall it be liable for any damages of any kind or nature to person, product, or property.

There are no Warranties for used products or products that have been repaired, altered, modified, subjected to misuse, negligence, accident or ordinary wear and tear.

TruXedo products are sold without any express warranty except as set forth above. TruXedo is not obligated to honor warranty claims if Genuine TruXedo parts are not utilized.

**DIRECT ALL WARRANTY CLAIMS TO TRUXEDO AT 1-877-878-9336**

Register online at [www.truxedo.com](http://www.truxedo.com) or mail this form to:  
TruXedo, P.O. Box 1078, Yankton, SD 57078-1078

Name: _____	Product Purchased:
Address: _____	<input type="checkbox"/> Original TruXedo
City: _____ State: _____ Zip: _____	<input type="checkbox"/> TruXedo Lo Pro QT
Phone Number: _____	<input type="checkbox"/> TruXedoPlus
Email Address: _____	<input type="checkbox"/> TruXport
Date Purchased: _____ Price Paid: _____	<input type="checkbox"/> TruXedo Deuce
Dealer Name: _____	<input type="checkbox"/> TonneauTraX
Pickup Make: _____	<input type="checkbox"/> TonneauMate
Model: _____ Year: _____	<input type="checkbox"/> Edge

## OWNER/USER RESPONSIBILITIES

It is the responsibility of the owner/user to read this manual and comply with the operating procedures. The owner/user is also responsible for inspecting the TruXedo® cover, and for having parts repaired or replaced when worn or damaged.

Failure to follow safety instructions and warning labels could result in failure of your cover system and/or personal injury.

## MESSAGES TO INSTALLER


- Always wear safety glasses and/or other necessary protective equipment when installing your TruXedo®.
- These instructions are complete for most pickup models. Additional instructions are included, if required for your truck. Please read entire manual before installing your TruXedo®.

## COVER MAINTENANCE

Vinyl cover can be hand washed with mild soap and water or cleaned in a car wash. Thoroughly rinse cover to remove any soap residue. Cover can be treated with any vinyl protectant made for tonneau covers. **Never use silicon, petroleum, or citrus based products on your tonneau cover.**

## SAFETY INSTRUCTIONS

1. **Do not place objects on or against cover or framework.**
2. **Do not tie cargo to TruXedo framework.**
3. **Never allow children or pets to occupy pickup box while cover is closed.**
4. **Cover is not airtight. Special care is required to keep cargo clean and dry.**
5. **Fabric cover won't prevent theft of contents inside truck box.**
6. **Cover must be rolled fully open and secured with safety straps when towing vehicle backwards.**

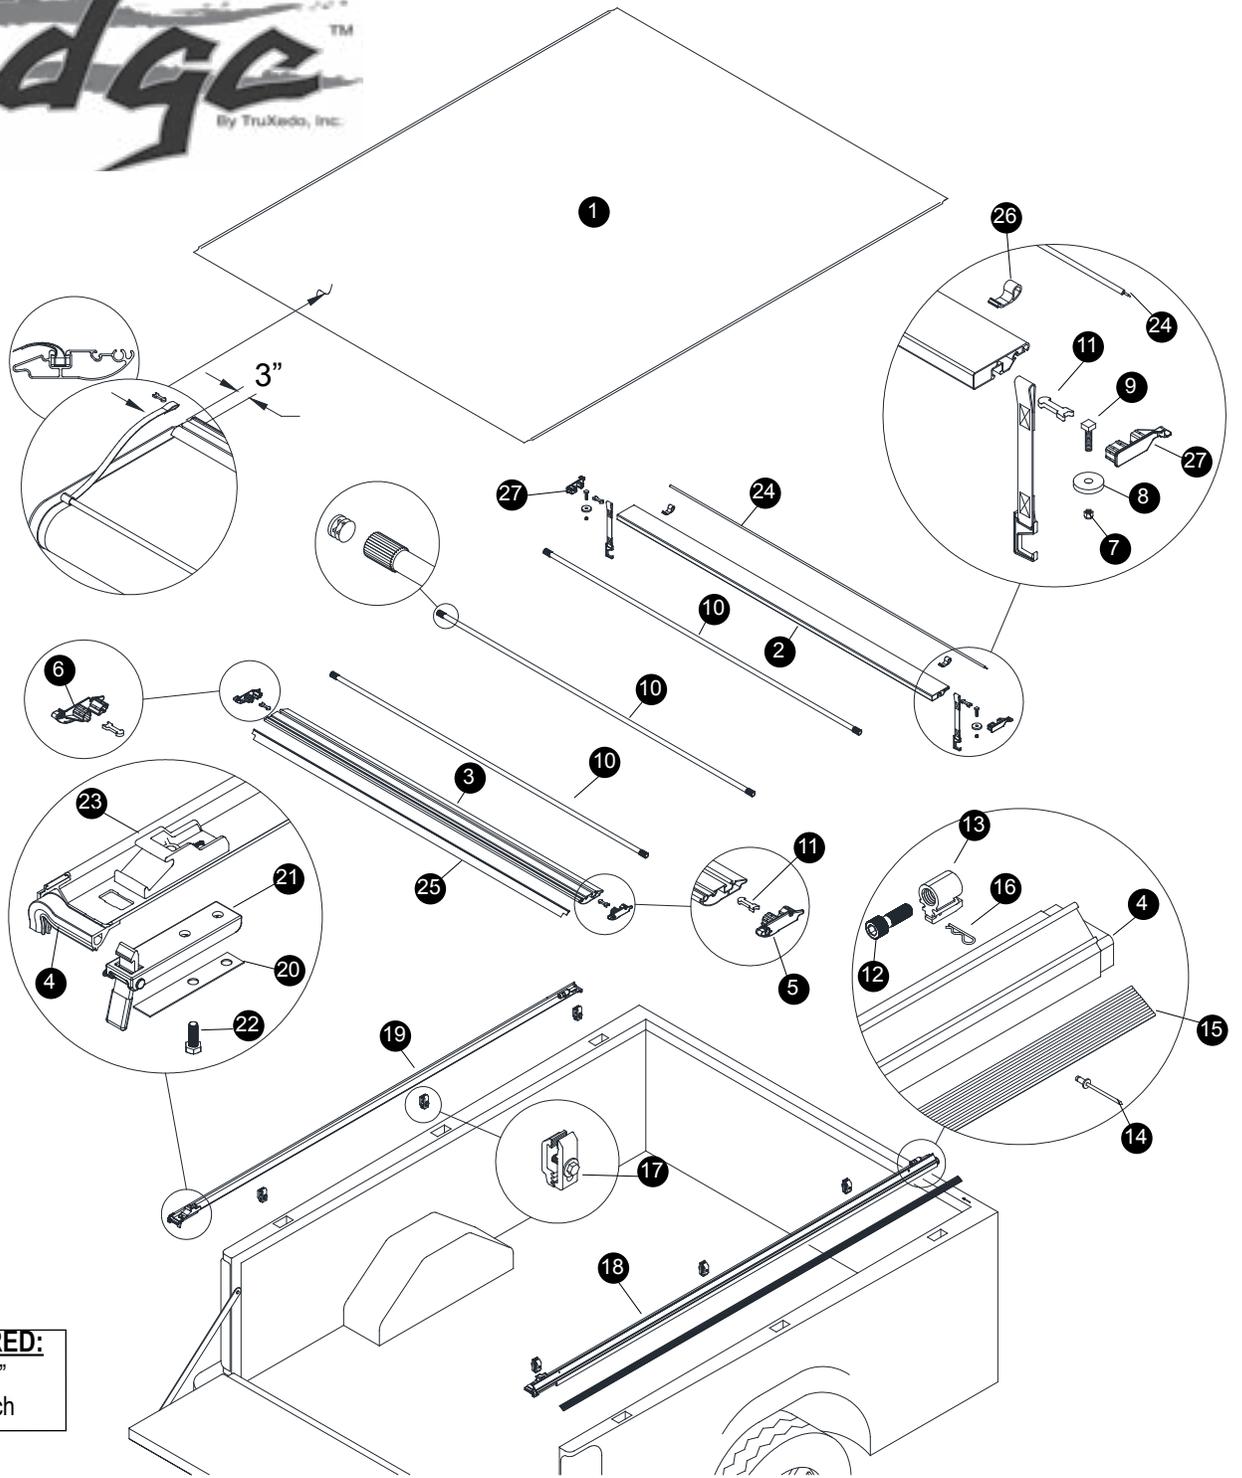


**TOOLS REQUIRED:**  
 1. Ratchet w/ 9/16" socket or wrench

**EDGE TONNEAU COVER REPLACEMENT PARTS**

1	*	Replacement Tonneau Cover	11	1115354	Header Insert Safety Clip	20	1114773	Flat Spring, 5/8" x 3 7/8"
2	*	Aluminum Header <b>Front</b>	12	1704250	Tension Control Screw	21	1704213	Latch Assembly
3	*	Aluminum Header <b>Rear</b>	13	1703260	Tension Control Bracket	22	1702926	Cap Screw, 5/16" x 7/8"
4	1117392	TruxSeal, 3.5 long	14	1702826	Rivet 1/8 Dia. x 1/4" Long	23	1704187	Header Stop
5	1704517	Rear Header End Plug, Right	15	*	Hook and Loop Fasteners	24	*	Header Seal, Notched
6	1704516	Rear Header End Plug, Left	16	1702611	Cotter Pin, 3/64" x 19/32"	25	*	Header Seal, Rear
7	1701580	Hex Lock Nut, 3/8"-16	17	1115191	Aluminum Clamp Assy	26	1704715	Extruded Retainer Loop
8	1115745	Washer Plastic 1/4 x 1.50 Dia.	18	*	Side Rail, Passenger's Side	27	1117540	Front Header 08 End Plugs (2 Pack)
9	1703455	Square. Hd Cap Screw, 3/8" x 1 1/2"	19	*	Side Rail, Driver's Side			
10	*	Aluminum Bow						



\* Please specify length or make and model of vehicle.

# SIDE RAIL & COVER INSTALLATION

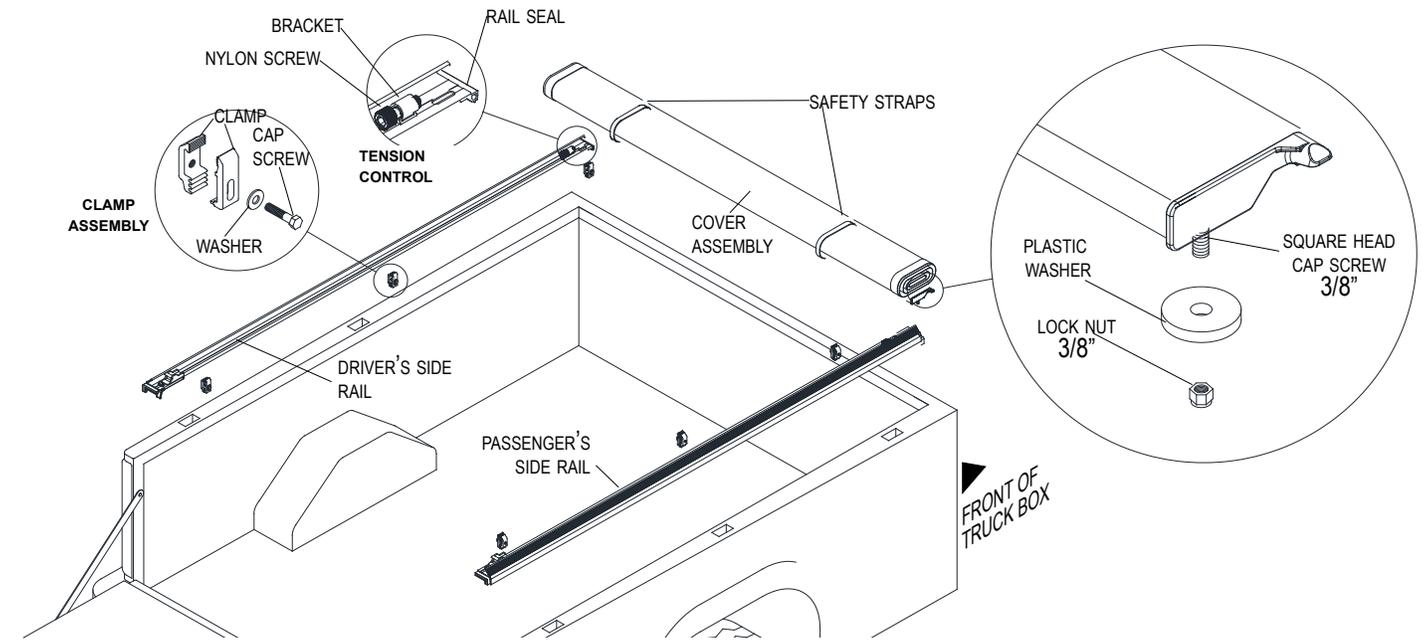


**STEP 1:** Place side rails on truck box compressing front rail seal slightly. Rails must be flush with box rail and level with each other. Starting at tailgate, evenly space 3 clamps along each side rail, leaving about 8" on each end.

**NOTE: High Bed Caps -** Adjust side rail height if needed in order to get a good seal at front and back of cover.

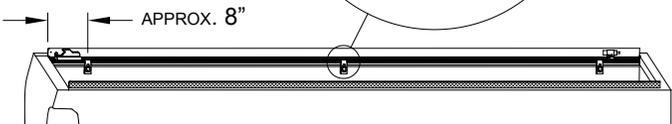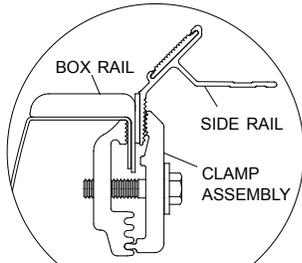


**WARNING** Tighten clamps securely on side rails before driving vehicle.

**STEP 2:** For optimum latching performance and cover fit, side rails must be level. To adjust rails, loosen screws and reposition male clamps higher or lower. Tighten all clamps.

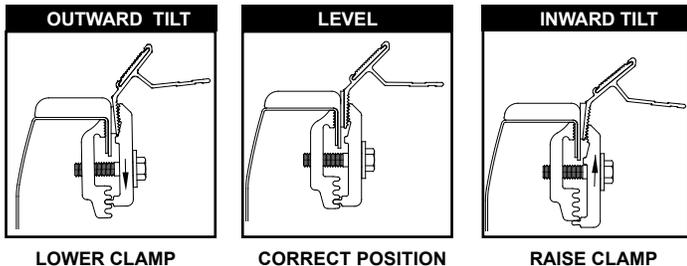


**NOTE:** Clamp configurations shown above are for reference only, and are not intended to be standard for all pickups.


**STEP 3:** Set cover assembly across cab end of side rails. Insert square head cap screws through slots in side rails. Secure with plastic washers and lock nuts. Finger tighten.

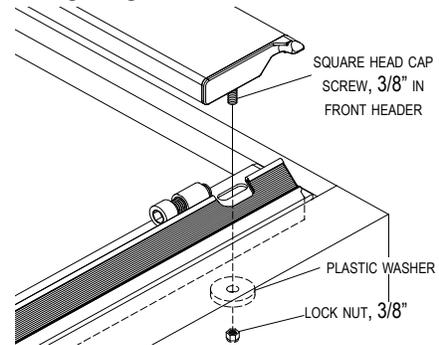

**STEP 4:** Set cover assembly behind cab with header seal on top of rail.

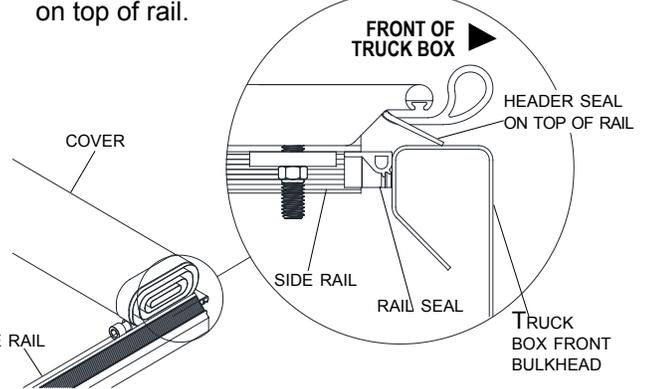


**STEP 5:** Tighten bolts but do not over tighten. Header must be free to slide.

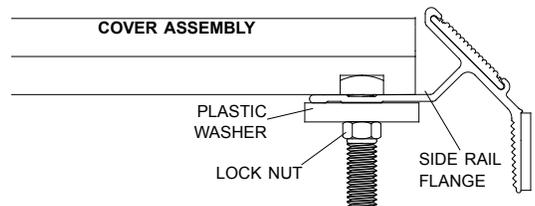


## LATCHING & UNLATCHING COVER

**STEP 6:** Unroll cover toward tailgate and rest bows on side rails. Rotate header into header stops and press down to lock toggle into header. Cover must be closed before closing the tailgate.

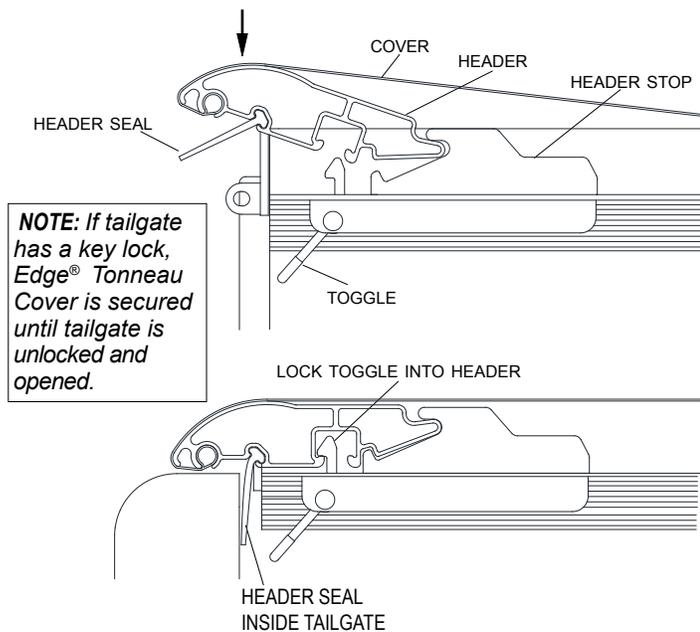


**STEP 7:** Secure hook and loop fastener strips on one side of rail, by pressing along full length of rail. Pull cover tight across pickup bed, and secure hook and loop fasteners on opposite side rail.

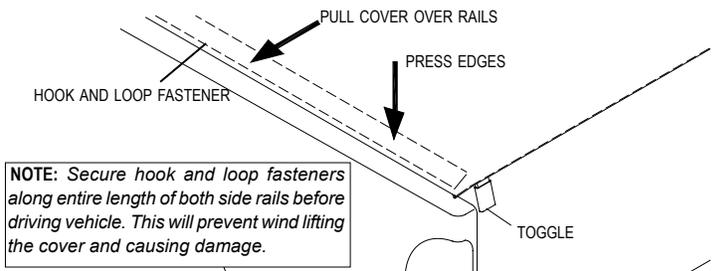


**STEP 8:** To release cover, Trigger pull rear release toggle. Start rolling cover toward cab making sure both sides of cover roll evenly. For best results leave unrolled portion of cover attached to the hook and loop fasteners while opening.

**STEP 9:** Secure cover open by hooking safety straps to front loops.

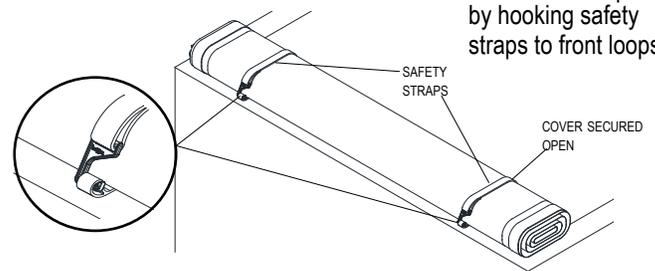


## COVER TENSION ADJUSTMENT

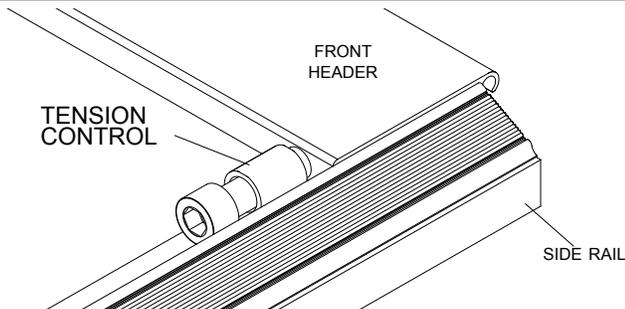

- Cover tension must be adjusted manually.
- Check cover tension after installation, seasonally, and after extreme temperature changes.
- For best performance, adjust tension regularly to protect your cover against wind wear.

**STEP 10:** Set tension during **warmest part of day**. With cover closed, release hook and loop fasteners from both side rails near cab. Roll cover opened and rotate tension controls to adjust. Close cover and recheck. Repeat until satisfactory tension is achieved.

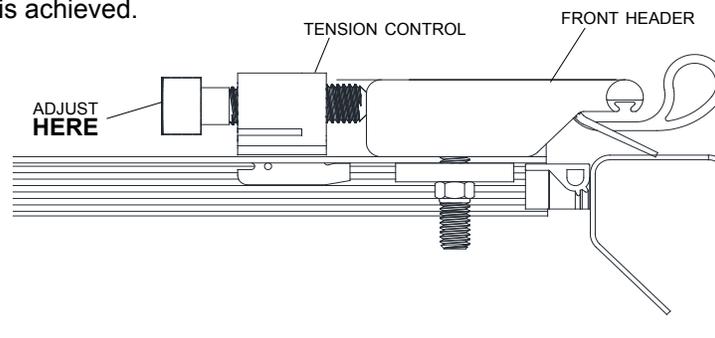

**NOTE:** Adjust tension in small increments. Slight adjustments yield significant results.

## TROUBLE SHOOTING

### Questions?

Call our friendly customer service staff at TruXedo Toll Free:

**1-877-878-9336**  
Mon - Fri 8 am - 5 pm CST

### HEADER WILL NOT LATCH:

- Check side rails to make sure they are level (Step 2).
- Make sure the header seal is not caught between the side rail and the header.
- Check position of side rails on pickup box - they may be positioned too low (Step 1).
- Close cover first and then close tailgate.

**FABRIC COVER IS TOO TIGHT OR TOO LOOSE:** Adjust tension (Step 10).