

POP & LOCK[®]

Installation Instructions

Tailgate Lock PL1600 Chevy S-10/GMC Sonoma '94-'04, Isuzu Hombre '96&Up

Contents:

Lock Assembly, 2 keys
1/4-20 One-Way Screw (2)
1/4-20 Hex Bolt (2)
Small Washer (2) ID 0.32"OD 0.75"
Instructions, Warranty Card

Tools Required:

3/16 Allen Wrench or # 30 Torx
7/16 Socket or Adjustable Wrench

Tech Support:

Call 1-800-342-5911

1.

Loosen all three bolts of the handle, push the handle up as high as it will go and tighten the top bolt. Remove the bottom two bolts (see Fig. 7)

Note: Bedliner panel may have to be removed.




2.

Squeeze the top edge of the black plastic insert down to release the top two locking tabs, carefully to prevent breakage.



3.

Remove the plastic insert by pivoting it on the bottom edge.

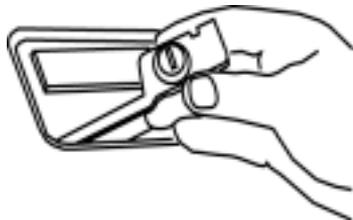


4.

Insert the POP&LOCK bracket at an angle on the drivers side and push it all the way to the left to clear the passenger side actuating rod.

5.

Now slide the POP&LOCK to the right so that the mounting bracket is positioned under the actuating rod on the passenger side.

Insert the bolts and washers and capture the bracket loosely with just a few turns of the bolts.

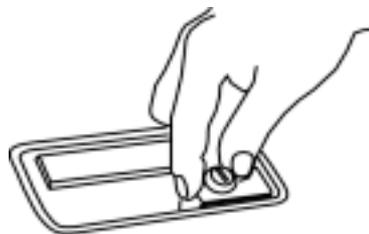

6.

Carefully slide the plastic insert in and click it into place.



7.

Tighten the mounting bolts.

